


AVENTICS Series PE5 Pressure sensors

The AVENTICS Series PE5 is an electronic pressure sensor, which combines electronic precision and versatile functions with ideal user friendliness.

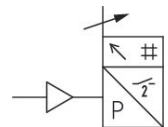

Technical information

Industry	Industrial
Output signal	2 x PNP, NPN, Push-pull
Type	electronic
Operating pressure min	-1 bar
Operating pressure max	1 bar
Protection against overpressure	5 bar
Operational voltage	17-30 V DC
Switching logic	NO/NC (adjustable)
Max. shock resistance	30 g
Vibration resistance	5 g (10 - 150 Hz)
Precision (% of full scale value)	± 0,2 %
Hysteresis	adjustable
Measurement	Relative pressure
Display	LCD display, 4 digits Color setting: green or red
Units displayed	bar psi kPa MPa inHg

Pressure sensor, Series PE5

PE5

R412010762

2024-04-04

Compressed air connection	Ø 4
Compressed air connection type	push-in fitting
Min. medium temperature	0 °C
Max. medium temperature	60 °C
Medium	Compressed air (max. 40 µm)
Certificates	CE declaration of conformity cULus RoHS Conforms with REACH Free of substances that impair surface wetting in the coating process
Electrical connection type	Plug
Electrical connection size	M12x1
Electrical connection number of poles	4-pin
Min. ambient temperature	0 °C
Max. ambient temperature	60 °C
Max. oil content of compressed air	40 mg/m ³
Switching time	< 5 ms
Resetting point	adjustable 0 ... 100%
Switching point	adjustable 0 ... 100%
Quiescent current consumption	<40 mA
Delayed hysteresis	adjustable
Analog output linearity	<± 0.5% of the final value
Maximum load (analog current output)	600 Ω
Protection class	IP65 IP67 with connections assembled
Short circuit resistance	Max. 600 ohms (current output) Min. 3K ohms (voltage output)
Mounting types	Directly on hat rail and wall mounting For panel installation using mounting kit via double nipple
Weight	0.04 kg

Material

Housing material	Polycarbonate
Seal material	Acrylonitrile butadiene rubber
Material electrical connection	Aluminum
Part No.	R412010762

Technical information

Alternative pressure connection (G1/4) on the rear side (closed with plug)


Display color selectable, red or green

The pressure dew point must be at least 15 °C less than ambient and medium temperature and may not exceed 3 °C.

The oil content of compressed air must remain constant during the life cycle.


Use only the approved oils from AVENTICS. Further information can be found in the "Technical information" document (available in <https://www.emerson.com/en-us/support>).

push-in fitting

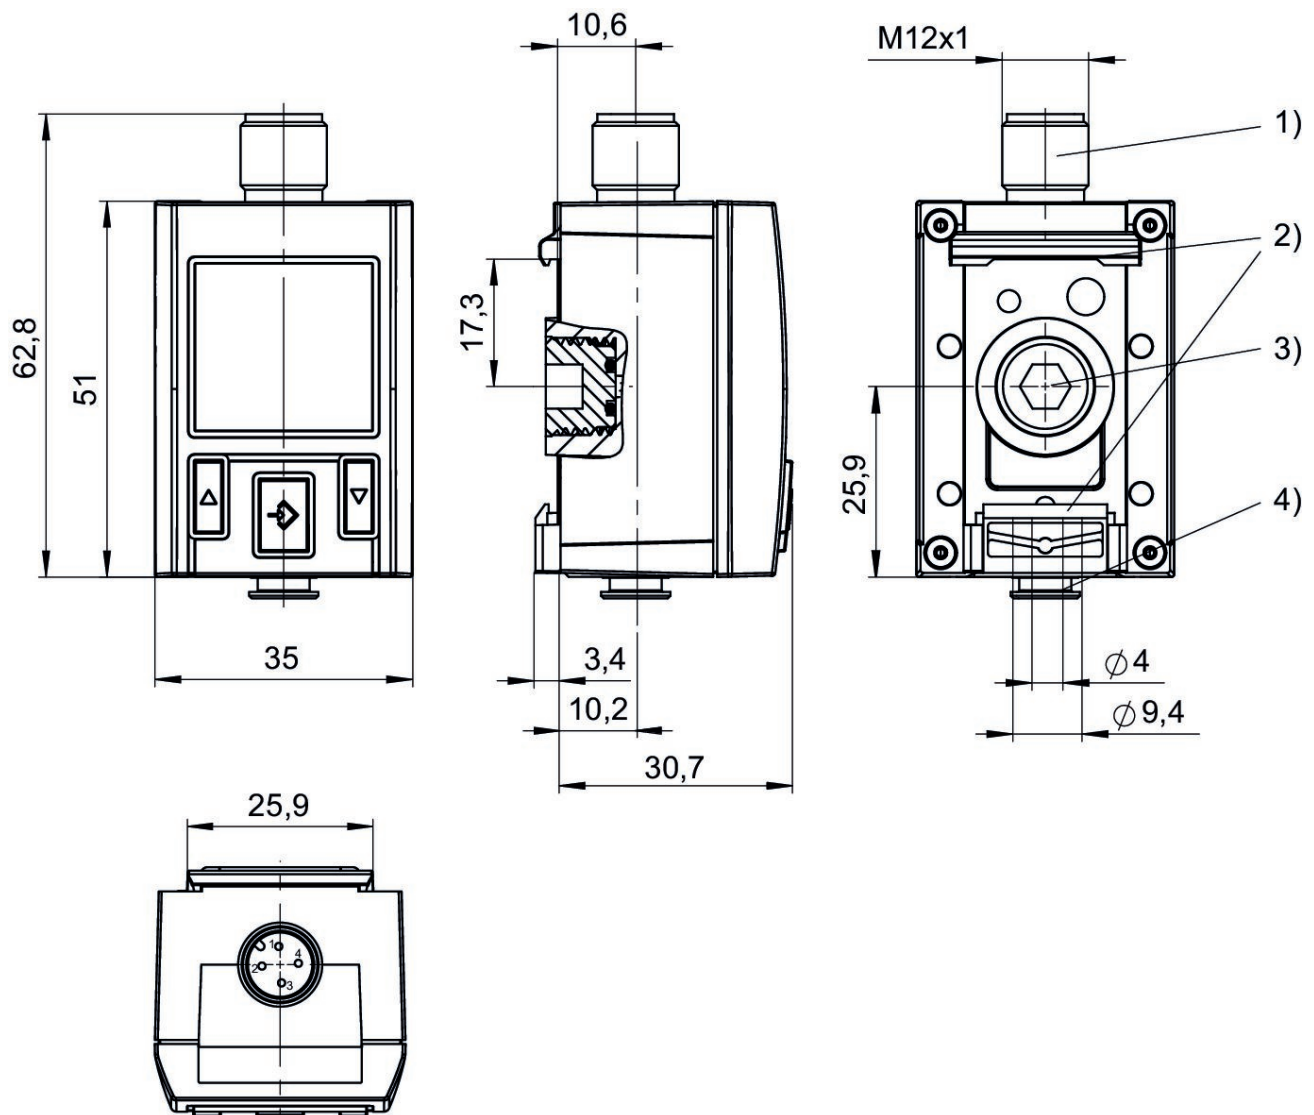


- 1) M12x1 electrical connection
- 2) Mounting for hat rail and wall mounting
- 3) Alternative pressure connection (G1/4) closed with plug
- 4) Pressure connection, tubing Ø 4 mm

Internal thread

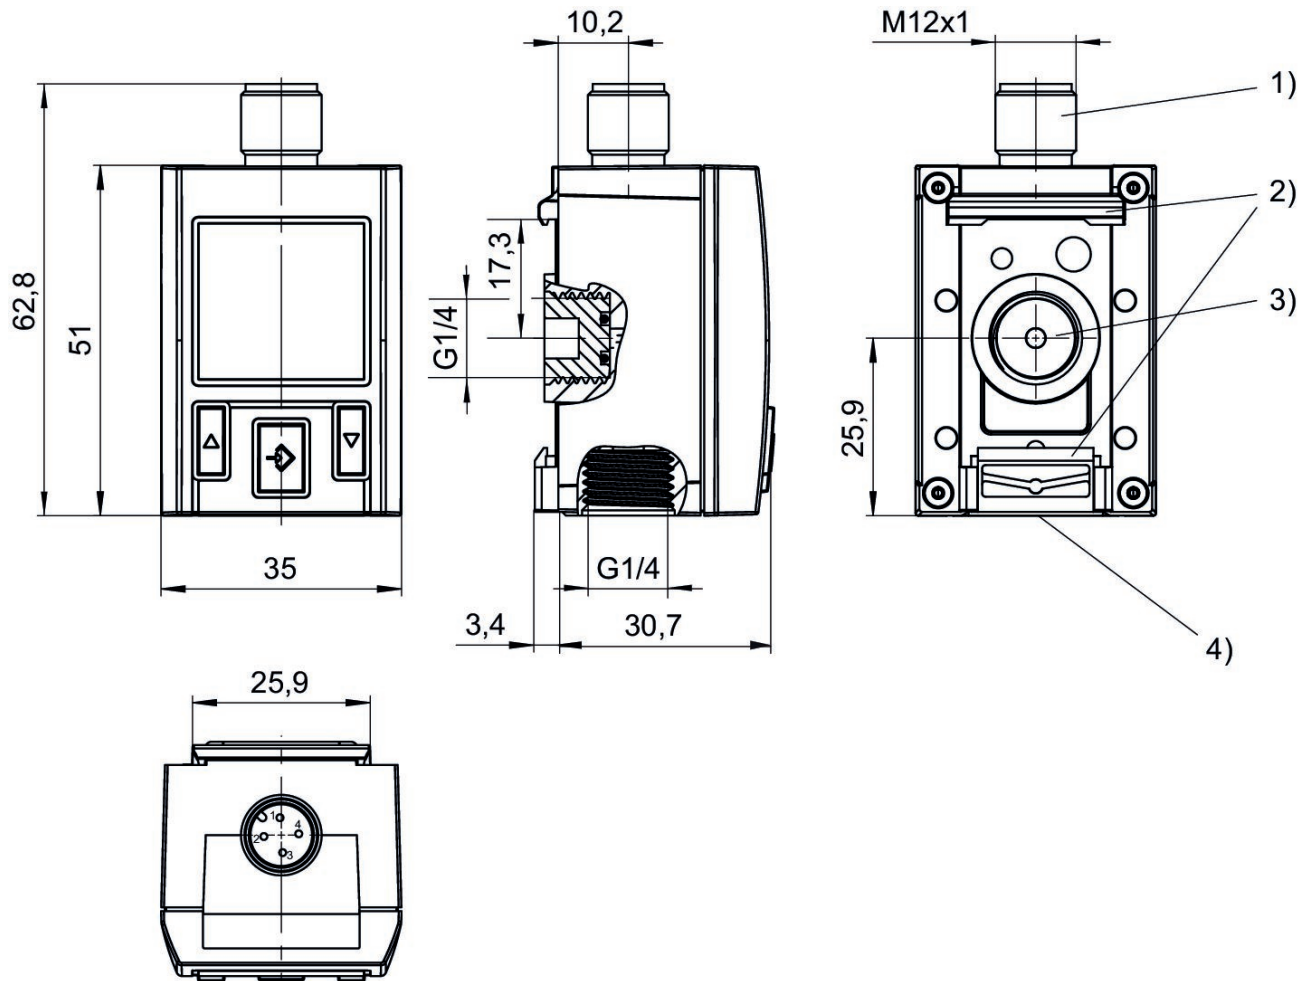


- 1) M12x1 electrical connection
- 2) Mounting for hat rail and wall mounting
- 3) Alternative pressure connection (G1/4) closed with plug
- 4) Pressure connection G1/4

Electr. connection for leak test

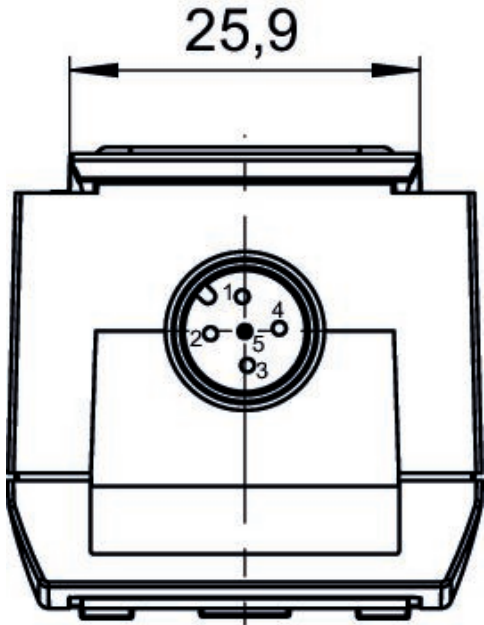


Display and operation area

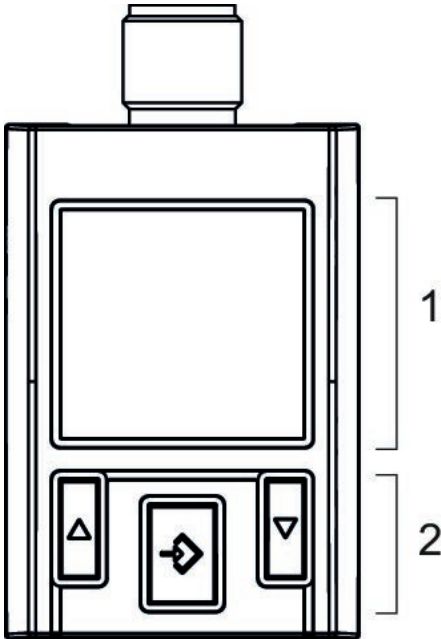


- 1) LCD display
- 2) Control panel with 3 buttons

Leakage characteristic

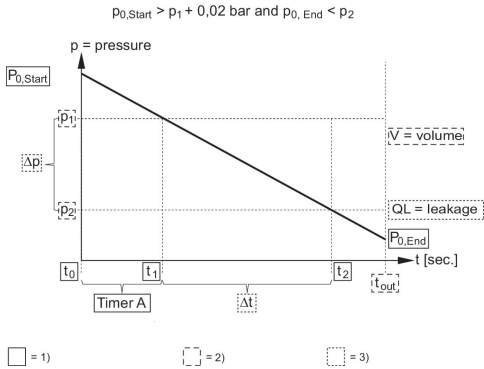


- 1) Internally stored parameter
- 2) Adjustable parameter
- 3) Output value

Operating mode
Push-pull

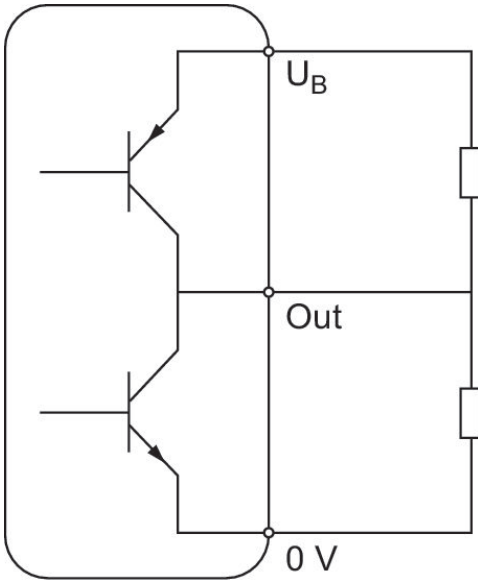


Operating mode

NPN

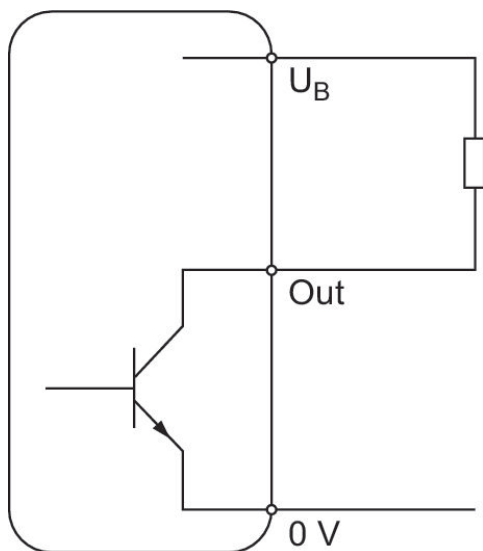


Operating mode

PNP

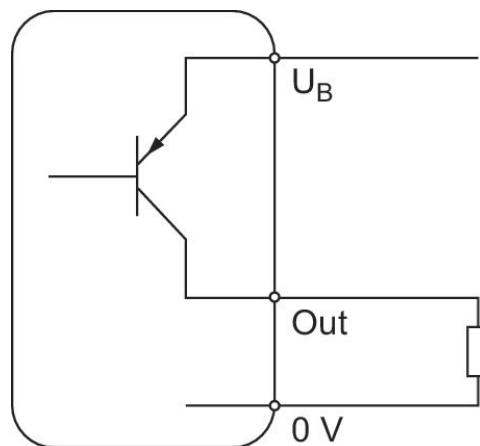


Hysteresis function: switching and resetting behavior dependent on pressure p and time t

In case of underpressure

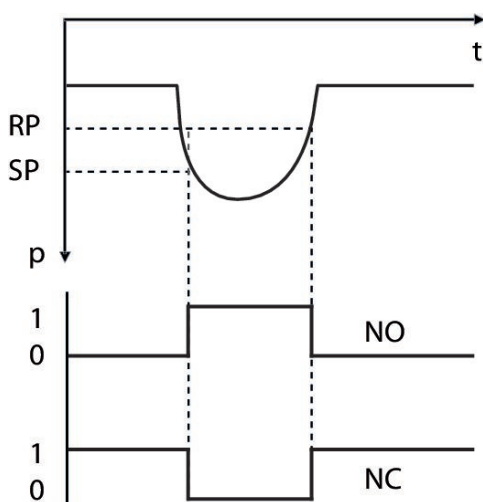

Hysteresis function: switching and resetting behavior dependent on pressure p and time t

In case of overpressure

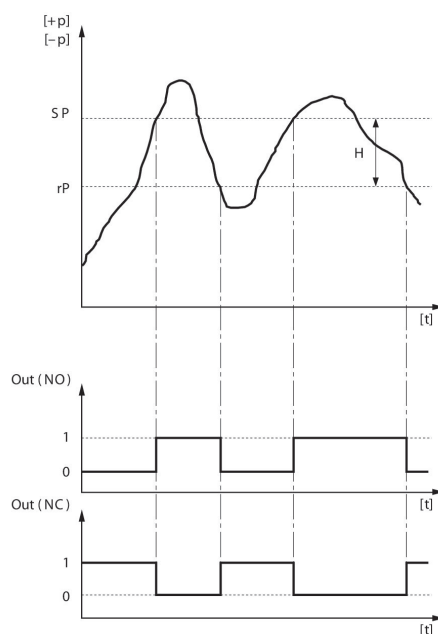


H: Hysteresis

SP = switching point RP = resetting point


Out (NC): switch output, break contact Out (NO): switch output, make contact

Delayed hysteresis function: switching and resetting behavior depending on pressure p and time t

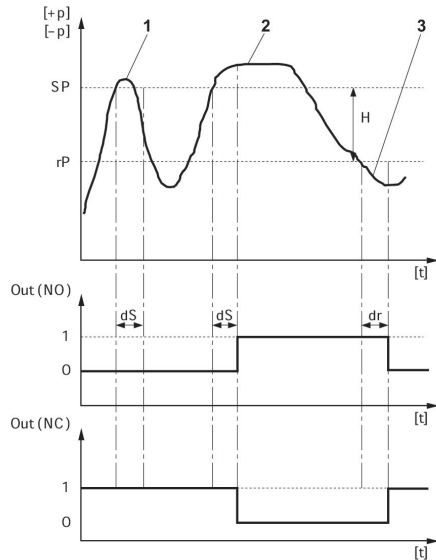


H: Hysteresis
SP = switching point RP = resetting point
Out (NC): switch output, break contact Out (NO): switch output, make contact
dS: switching delay dR = reset delay
1) period of pressure over the switching point $< dS$: pressure sensor does not switch 2) Period of pressure over the switching point $> dS$: pressure sensor switches 3) Period of pressure under the resetting point $> dR$: pressure sensor switches

Window function: switching and resetting behavior depending on pressure p and time t

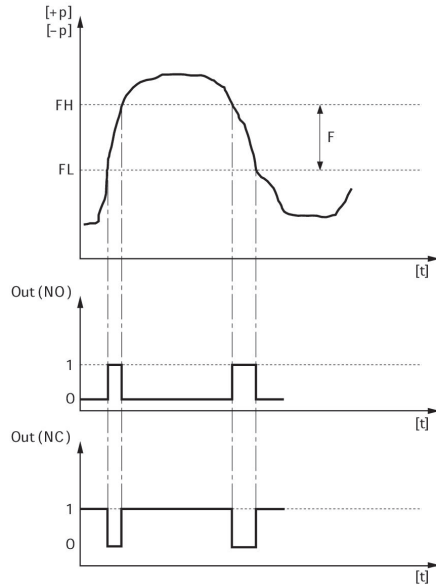


FH: pressure band, upper value
FL: pressure band, lower value
Out (NC): switch output, break contact Out (NO): switch output, make contact

Block diagram 1x PNP and 1x analog

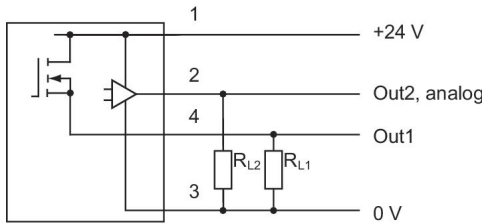

RL = storable position

Block diagram 1x NPN and 1x analog

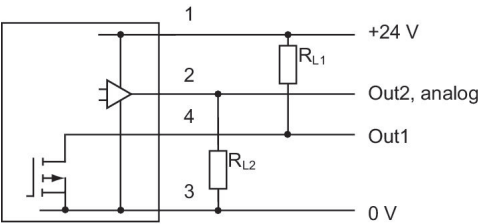


RL = storable position

Pin assignments

M12x1


4-pin

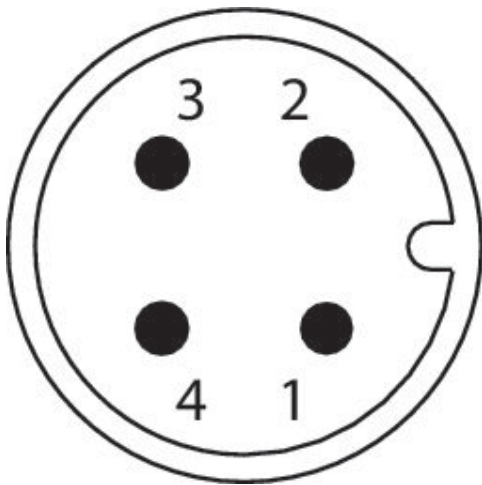

Pin assignments

M12x1

5-pin

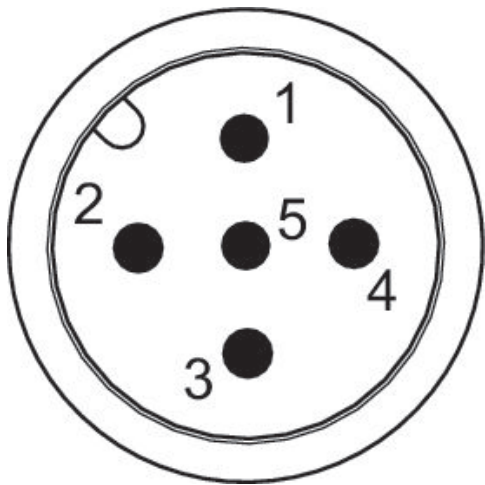

Pin assignments

Pin	Allocation
1	Supply Voltage
2	Switch output PNP/NPN/push-pull, switchable
3	0 V
4	Switch output PNP/NPN/push-pull/leakage mode, digital switch input PNP
5	Analog output (0 to 10 V DC, 4 to 20 mA)